

# HOME

## QUALITY HARDWARE HASP & STAPLE

### Installation Tips

1. Position hasp and staple in desired location to check that the unit will function as intended
2. Using a pencil mark the position for the screw holes for the hasp and staple and using a drill and a 1mm drill bit drill pilot holes for the screws.
3. Fasten the hasp to the lid with a screwdriver and screws provided.
4. Ensure that the hasp will engage the staple and fasten the staple with screws provided.

